


| No | Item | Distance to PL (cm) | Batten Length (cm) | Operating Mode |
|------|------------------------------|---------------------|--------------------|-------------------------------|
| LX A | Lighting Bar (Auditorium) | -957 | 1800 | Electric |
| LX B | Lighting Bar (Orchestra Pit) | -335 | 1600 | Electric |
| PL | Plaster Line | 0 | -- | -- |
| 1 | Hand Painted Main Curtain | 30 | 1990 | Electric, Up/Down |
| 2 | Teaser | 50 | 2200 | Manual |
| 3 | Leg 1 | 70 | 2600 | Manual |
| 4 | Traveler Main Curtain | 100 | 2200 | Electric, Up/Down, Open/Close |
| 5 | Scenery Batten 1 | 130 | 2200 | Manual |
| 6 | Lighting Bar 1S | 170 | 2200 | Electric |
| 7 | Leg 2 | 230 | 2600 | Manual |
| 8 | Top Acoustic Reflector 1 | 288 | 1746 | Electric |
| 9 | Border 1 | 330 | 2200 | Manual |
| 10 | Lighting Bar 2S | 380 | 2200 | Electric |
| 11 | Leg 3 | 415 | 2600 | Manual |
| 12 | Scenery Batten 2 | 435 | 2200 | Manual |
| 13 | Scenery Batten 3 | 455 | 2200 | Manual |
| 14 | Scenery Batten 4 | 475 | 2200 | Manual |
| 15 | Scenery Batten 5 | 495 | 2600 | Manual |
| 16 | Border 2 | 515 | 2200 | Manual |
| 17 | Lighting Bar 3S | 570 | 2200 | Electric |
| 18 | Scenery Batten 6 | 620 | 2200 | Manual |
| 19 | Leg 4 | 640 | 2600 | Manual |
| 20 | Middle Traveler Curtain 1 | 660 | 2200 | Manual, Up/Down, Open/Close |
| 21 | Top Acoustic Reflector 2 | 710 | 1400 | Electric |
| 22 | Border 3 | 760 | 2200 | Manual |
| 23 | Lighting Bar 4S | 795 | 2200 | Electric |
| 24 | Back Acoustic Reflector | 880 | 1515 | Electric |
| 25 | Leg 5 | 935 | 2600 | Manual |
| 26 | Scenery Batten 7 | 955 | 2200 | Manual |
| 27 | Border 4 | 975 | 2200 | Manual |
| 28 | Scenery Batten 8 | 995 | 2200 | Manual |
| 29 | Scenery Batten 9 | 1015 | 2200 | Manual |
| 30 | Lighting Bar 5S | 1040 | 2200 | Electric |
| 31 | Scenery Batten 10 | 1125 | 2200 | Manual |
| 32 | Scenery Batten 11 | 1145 | 2200 | Manual |
| 33 | Cyclorama Lighting Bar HS | 1170 | 2200 | Electric |
| 34 | Scenery Batten 12 | 1215 | 2200 | Manual |
| 35 | Leg 6 | 1235 | 2600 | Manual |
| 36 | Scenery Batten 13 | 1255 | 2200 | Manual |
| 37 | Scenery Batten 14 | 1275 | 2200 | Manual |
| 38 | Back Traveler Curtain 2 | 1315 | 2200 | Manual, Up/Down, Open/Close |
| 39 | Scenery Batten 15 | 1355 | 2200 | Manual |
| 40 | Scenery Batten 16 | 1375 | 2200 | Manual |
| 41 | Rear Projection (RP) | 1395 | 2200 | Manual |
| | Depth (of Stage) | 1470 | | |
| L1 | Left Acoustic Reflector 1 | -- | 465 | Electric |
| L2 | Left Acoustic Reflector 2 | -- | 230 | Electric |
| R1 | Right Acoustic Reflector 1 | -- | 465 | Electric |
| R2 | Right Acoustic Reflector 2 | -- | 230 | Electric |

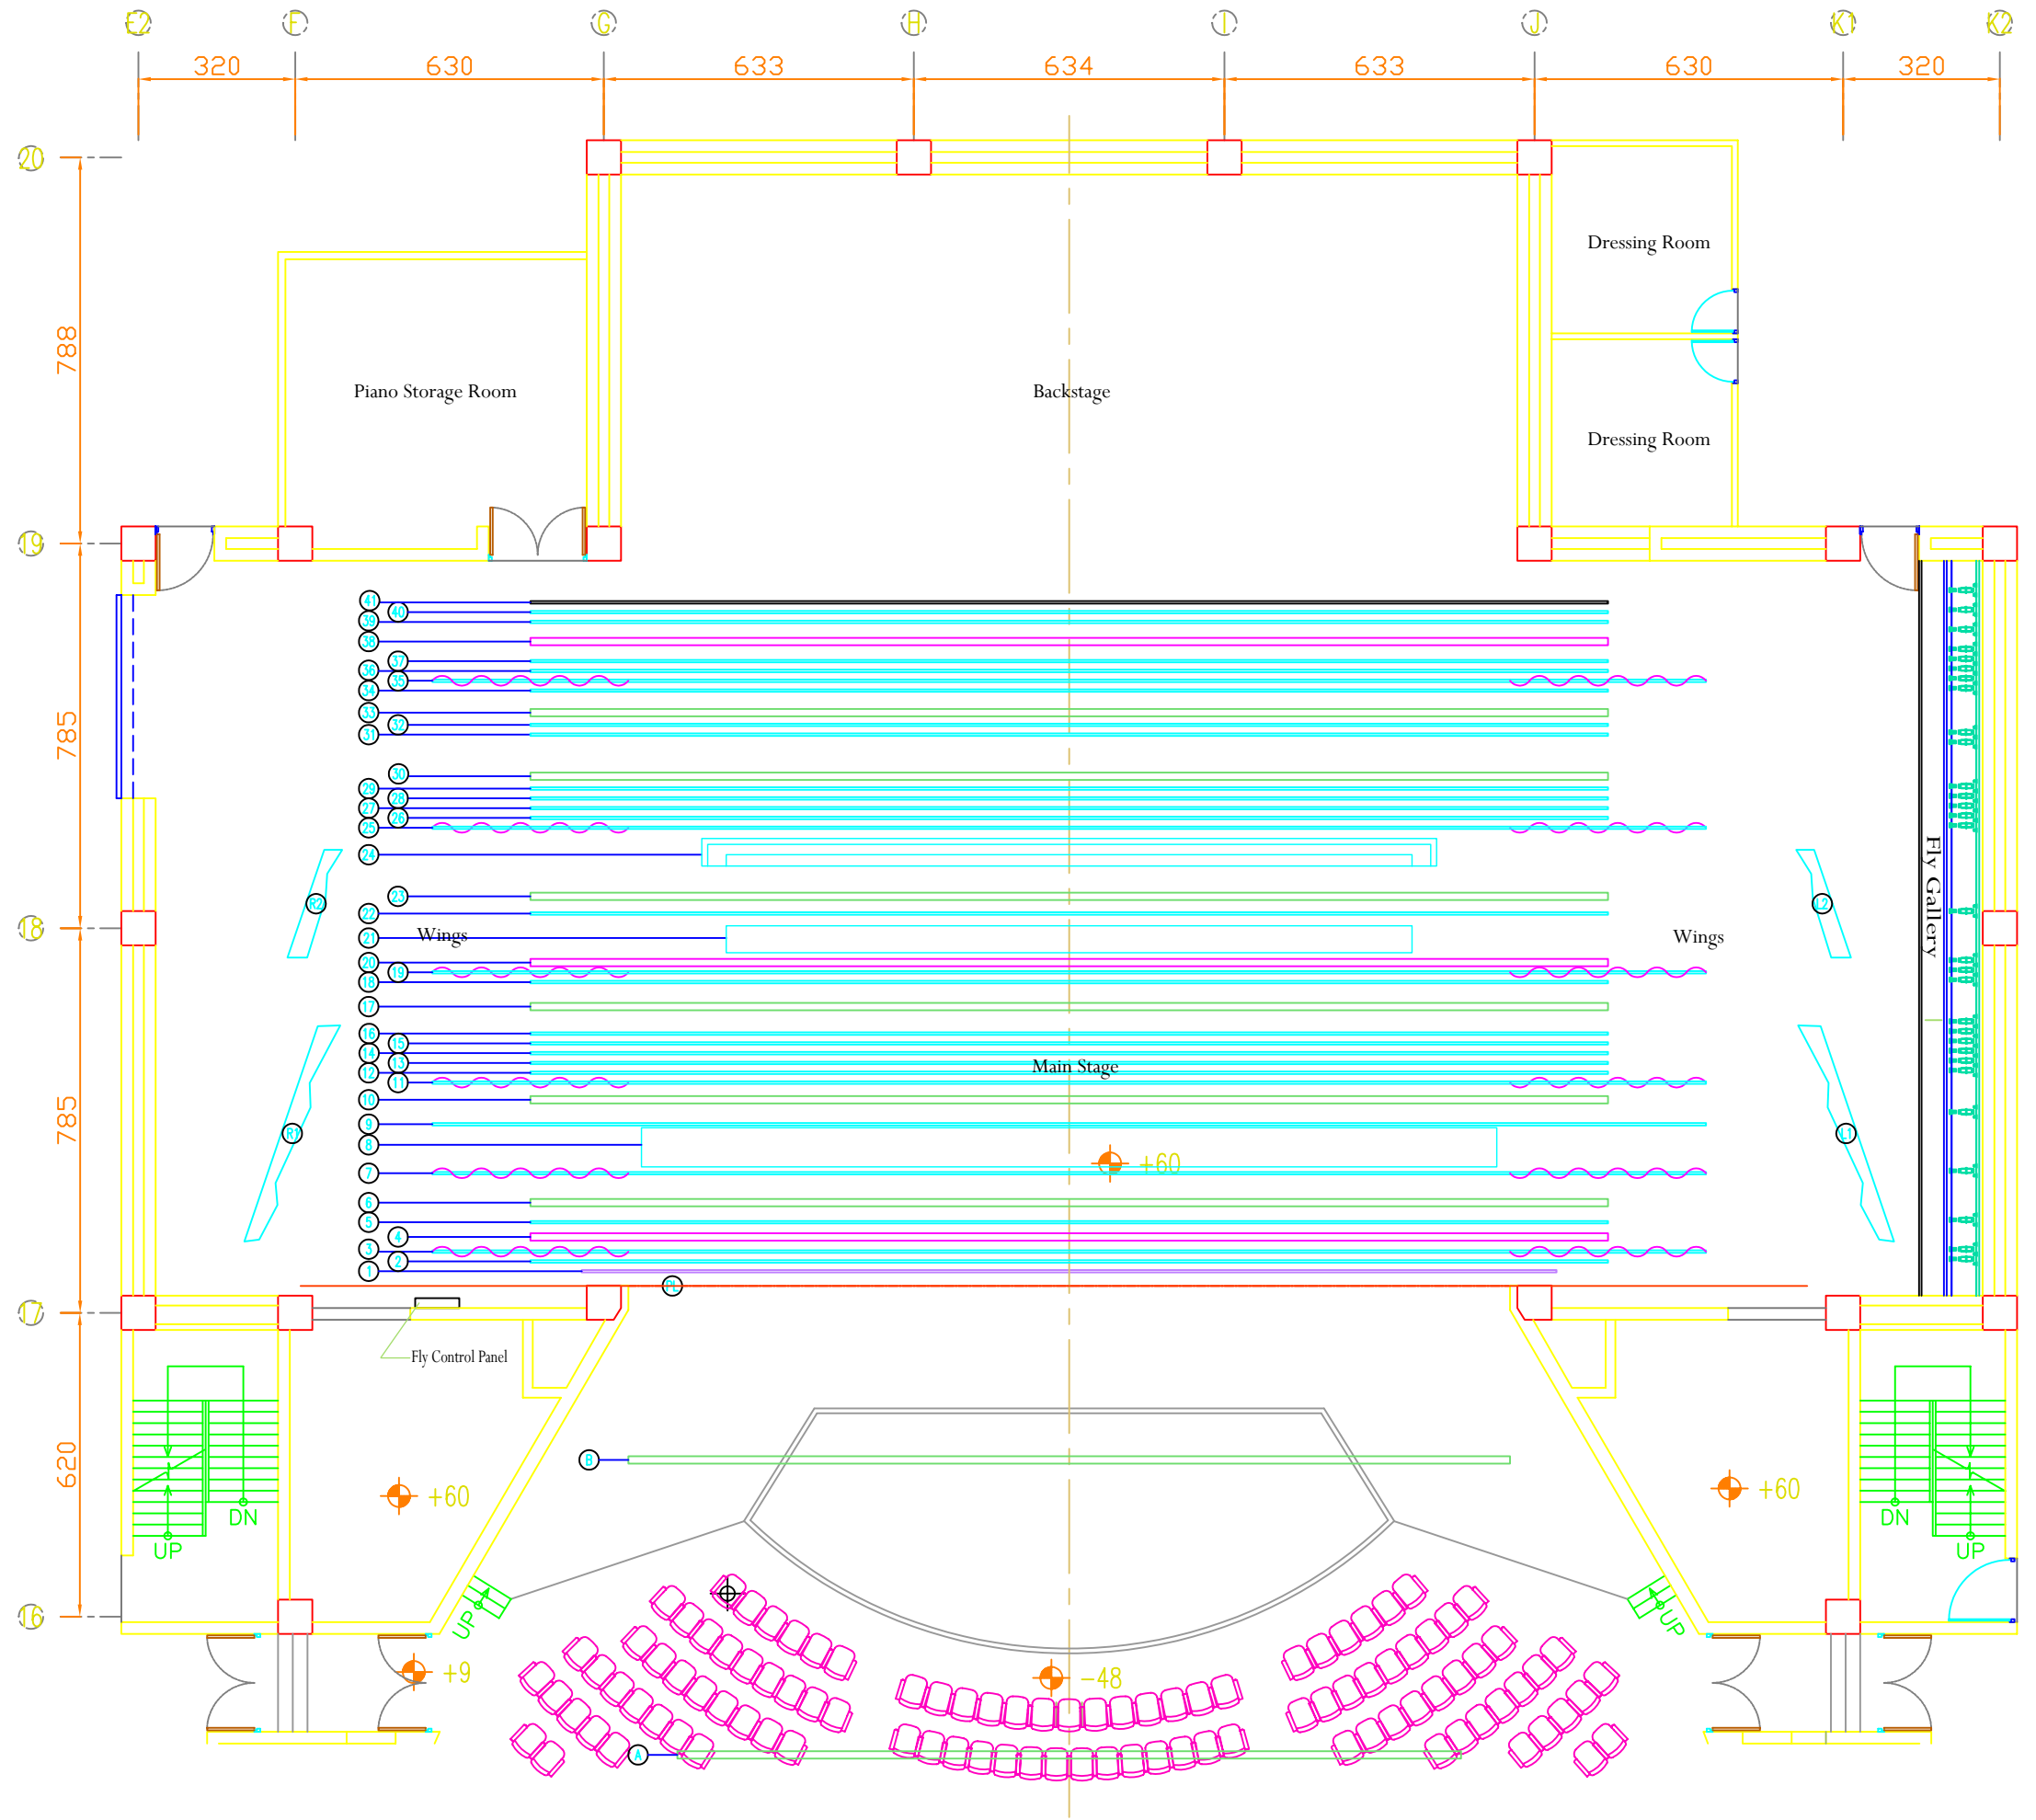

Performance Hall Fly System Plan

